



ASSEMBLY AND USER INSTRUCTIONS

Manu Learning Tower & Grow-with-Me Chair 2-in-1

Read all the instructions carefully before assembly and keep them for future reference.

Follow the instructions during assembly and make sure each step is carried out correctly. Only use the product as a chair or learning tower when it is fully assembled.

Warning

- Never leave your child unattended in the chair or on the learning tower.
- The product is intended for children who can sit up unaided.
- The armrests help keep your child in a safe position and protect them from accidental falls.
- **CAUTION: The learning tower armrests are designed for children weighing up to 15 kg.** When the armrests are fully extended and under a heavier load, their strength drops significantly, and safety can then no longer be guaranteed.
- The product is not intended for climbing or for hanging objects on.
- Do not use the product if any part is damaged.

Important information

- Do not expose the product to excessive moisture, rain or water.
- Do not expose the product to temperatures below 10 °C or above 50 °C.
- Only use the product for its intended purpose.
- Only use original, compatible Antonie Emma parts.
- All fasteners must always be fully screwed in and tightened. Tighten them gently – just until there is slight tension.
- Assembly is intended for persons aged 18 and over. If a younger person carries out the assembly, they must be continuously supervised by an adult, and the adult must then test the product – in particular the strength of the joints, its stability and its load-bearing capacity.
- Users may only modify the original product in accordance with the manufacturer's instructions.

Parts list


Ref.	Part	Quantity
A	Side panel	2
B	Backrest bar (2×) and crossbar (1×)	3
C	Screw	12 (6 per side panel)
D	Step	1
E	Armrest	2
F	Seat	1
G	Footrest	1
H	Wooden screw	6
I	Brace	1
J	Drawer (optional accessory)	1

Also included in the package

- 1 key for screws C
- Plastic cover caps

Material

- Solid beech with a hardwax oil finish
- Smooth film-faced birch plywood

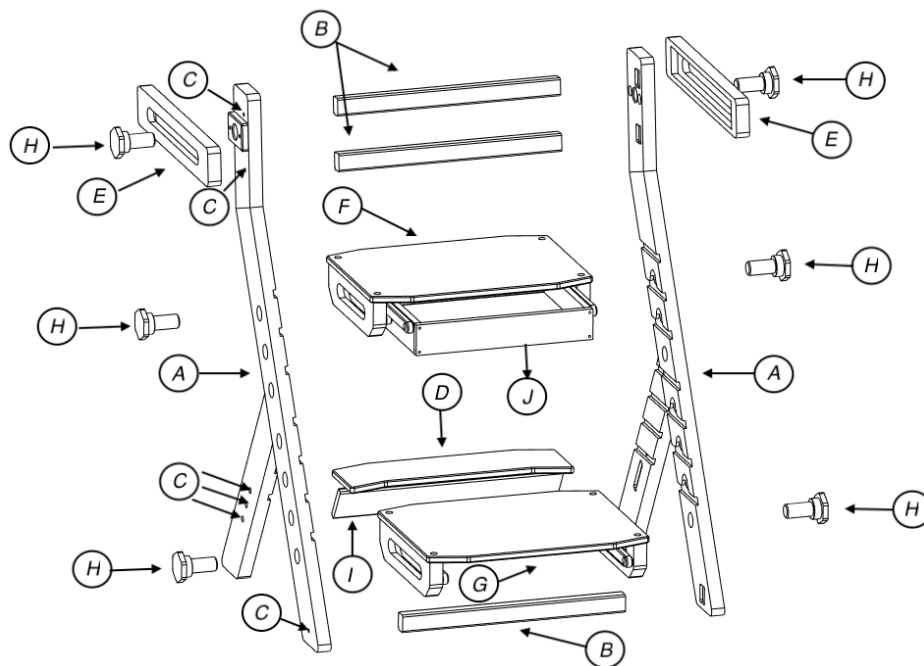


Exploded view – the letters correspond to the parts list.

Maintenance and care

- Check the product regularly, at least once a month: make sure that all fasteners are fully screwed in and tightened and that no part shows signs of wear.
- Damaged parts must be replaced in accordance with the manufacturer's instructions.
- Cleaning: wipe with a damp cloth. Do not use soap, solvents or other chemical products.

Assembly steps

- 1 Get all the parts ready before assembly. You do not need any other tools: drive in screws C with the supplied key, and tighten wooden screws H gently by hand – just until there is slight tension.
- 2 Using screws C, attach the backrest bars and the crossbar (parts B), brace I and step D to side panels A. First screw the parts to one side panel, then fit the second side panel and tighten all the screws gently with the supplied key – just until there is slight tension.
- 3 Stand the chair on a level surface.
- 4 Secure armrests E to side panels A with wooden screws H, using the holes provided (the same way on both sides).
- 5 Slide seat F into the grooves and fasten it on both sides with wooden screws H through the holes in side panels A. The seat and the footrest contain movable barrel nuts – during assembly, position them so that they are aligned with the axis of the screw.

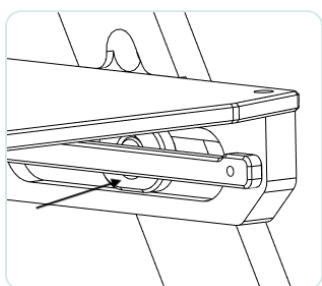

During assembly, the barrel nut (arrow) must be aligned with the axis of the screw.

- 6 Slide footrest G into the grooves and fasten it on both sides with wooden screws H through the holes in side panels A. Again, remember to align the barrel nuts with the axis of the screw.
- 7 Choose the seat height and depth to suit your child's height and age, and slide the seat and the footrest into the corresponding grooves.
- 8 The seat should be at a height where your child sits comfortably, with their forearms resting on the table and their elbows bent at a right angle. With their feet resting on the footrest, their knees should also be bent at a right angle.

Warranty and service

- The product comes with a 2-year warranty, or up to 5 years after product registration.
- We accept, assess, respond to and resolve every warranty claim.
- We provide out-of-warranty service for all Antonie Emma products. Pricing is agreed individually – email us at info@antonieemma.com.

Manufacturer

Antonie & Emma s.r.o.

Chudenická 1059/30, 102 00 Praha – Hostivař, Czech Republic

Production site: Březina 19, 294 11 Březina, Czech Republic

Company ID: 06527990 · VAT ID: CZ06527990

info@antonieemma.com · antonieemma.com

Made in the Czech Republic.

